


3005 AUTO FILL FLOW CONTROL  
 MUST BE ADJUSTED TO THE POINT WHERE  
 THERE IS A TRICKLE OF OIL ENTERING THE  
 HEADER TANK. DO NOT CLOSE OR OPEN  
 THIS VALVE COMPLETELY.

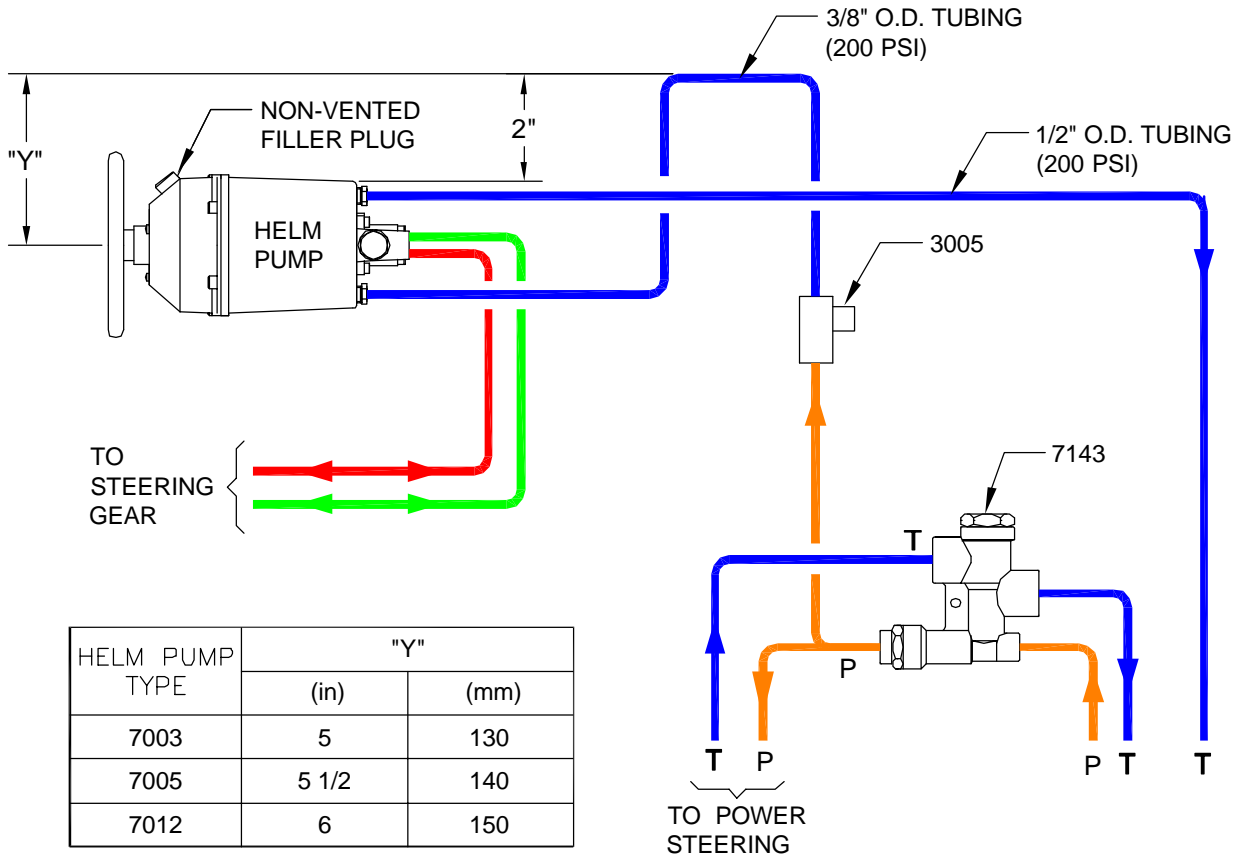

\* CRACK OPEN NON-VENTED FILLER PLUG TO ALLOW AIR TO ESCAPE FROM THE HELM PUMP HOUSING. ONCE OIL APPEARS, RE-INSTALL PLUG.

### AUTO FILL CONNECTION FOR LIMITED SPACE

<b>SALES QUOTE</b>		<b>KOBELT</b> MANUFACTURING COMPANY LIMITED	
-			
DRAWING STATUS	DWN	BY (MO) YR	TITLE
( ) PRELIMINARY ( ) FOR APPROVAL	L.Z.	200605	INSTALLATION FOR
(X) INFORMATION ( ) FOR QUOTATION	CHK		AUTO FILL (WITHOUT
( ) FOR CONST. ( ) AS BUILT	S.E.	200605	A HEADER TANK)
<small>THIS DRAWING IS THE PROPERTY OF KOBELT MANUFACTURING COMPANY LTD., AND ALL RIGHTS TO THE DATA HEREIN DISCLOSED HERE WITH KOBELT MANUFACTURING COMPANY LTD. NO PART OF THIS DRAWING MAY BE USED WITHOUT EXPRESS PERMISSION.</small>	SCALE	SHEET	DRAWING NO
	N/A	1 / 1	A
			REV
			-