


[print this page \[p\]](#) [close \[x\]](#)**Marlow**


Marlow Multiplait Nylon-to-Chain Splice for Anchor Warps




Anchor Chain and Marlow Multiplait.

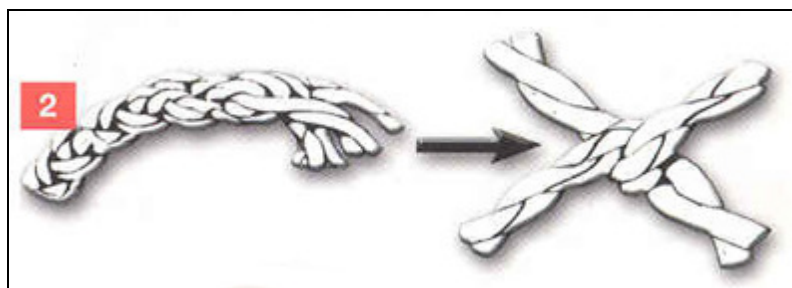


Unlay the four pairs of strands for a distance equivalent in length to fifteen links of chain, and apply a strong whipping keeping the pairs crossed in the center - it is with these crossed pairs that you commence your first tuck. To help identify correctly, they will either both be plain, or they will both have a black marker thread running through - it doesn't matter which you use, as long as you tuck matching pairs (both plain or both black).

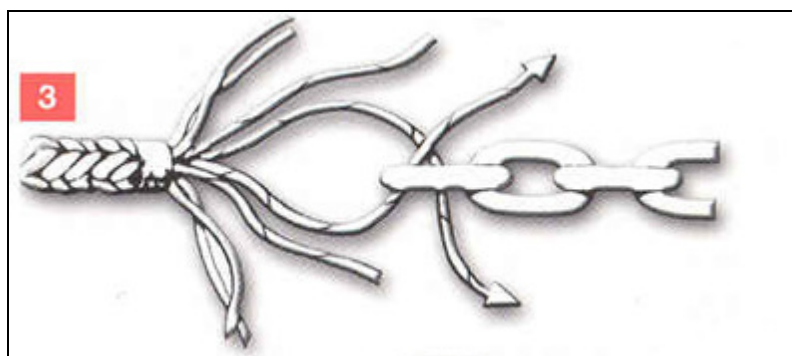

Unlay each of these center pairs into single strands and tuck them through the first link of chain as shown - two strands enter the link from below and two from above.

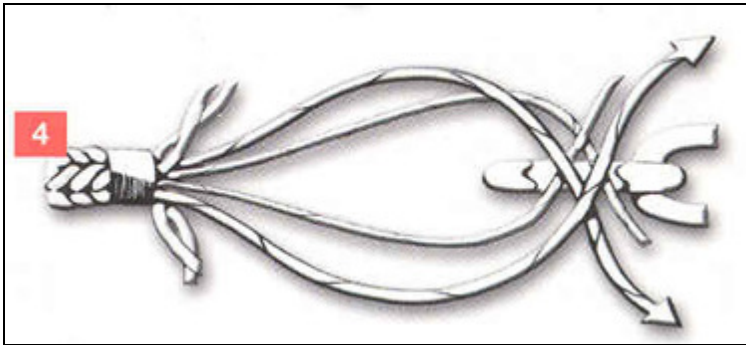

After first locking tucks, continue with one pair of strands only, keeping strands on top of the link in each tuck for five alternating links.

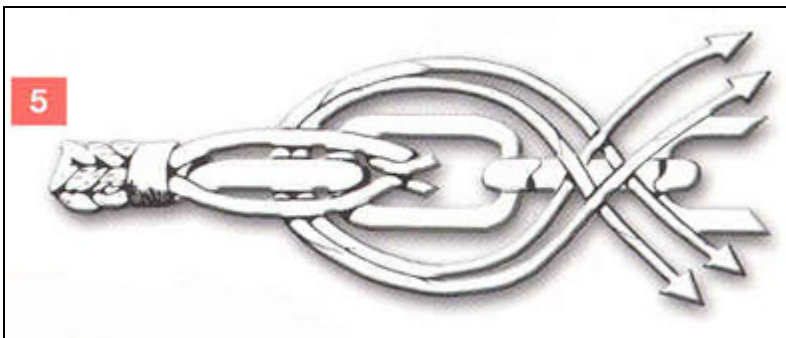

Turn the chain over and repeat with the other pair of strands, then tie off both pairs of strands.



Repeat as above with other pairs of strands and tie off as shown.

[How to Splice?](#)